



Full ("Away") Arming



- ❖ Quick mode:
- ❖ High Security mode: Code >



- ❖ Quick mode:
- ❖ High security mode: > code or use Proximity tag



Full Arm all: Security >



to apply to all partitions, or slide a specific partition to the right under



- ❖ Quick mode:
- ❖ High Security mode: > code



Press

Partial ("Stay") Arming



- ❖ Quick mode:
- ❖ High Security mode: Code >



- ❖ Quick mode:
- ❖ High security mode: > code or use Proximity tag



Partial Arm all: Security > press



to apply to all partitions, or slide a specific partition to the left under



- ❖ Quick mode:
- ❖ High security mode: > code



Press or large rounded button (installer-defined)

Partition & Group Arming



- ❖ Full partition arming:
 - Code > > select All or specific partition number/s >
- ❖ Partial partition arming:
 - Code > > select All or specific partition number/s >
- ❖ Group Arming: Press group letter



Note: Supports up to 3 partitions. Does not support Group arming.

- ❖ Full partition arming:
 - Quick mode: Partition number >
 - High Security mode: Partition number > > code or use Proximity tag
- ❖ Partial partition arming:
 - Quick mode: Partition number >
 - High Security mode: Partition number > > code or use Proximity tag



System Disarming



Code >



> code or use Proximity tag



Disarm all: Security > > code
> press Disarm



to disarm all partitions, or slide a specific partition to the center under > enter code



❖ Quick mode:
❖ High security mode: > code



Disarm all: Press

Partition & Group Disarming



Partition disarming: Code >
> select All or specific partition number(s)
Group disarming:



Partition disarming: Partition number >
 > code

Duress Disarming



Duress code >
Note: Panel is silent (no alarm siren)



> duress code
Note: Panel is silent (no alarm siren)

Bypassing & Un-bypassing Zones



> code, ✓ > scroll to Activities menu, ✓ > Bypass, ✓ > Zones, ✓
> scroll to select a bypass option, ✓

Viewing System Troubles



> code, ✓ > scroll to View menu, ✓ > Trouble, ✓ > scroll to view troubles

Viewing Last Alarm / Event Log



> code, ✓ > scroll to Event Log, ✓ > scroll to view events

Viewing System Status



i for 2 seconds



 
❖ Quick mode: for 2 seconds
❖ High Security mode: for 2 seconds
> code or use Proximity tag



❖ Quick mode: for 2 seconds
❖ High Security mode: for 2 seconds > code



Activating Output



Note: Must be installer-defined



❖ **Quick mode:** Press button (1–3) for 2 seconds

❖ **High security mode:** Press button (1–3) for 2 seconds ➤ code or use Proximity tag.

Note: Must be installer-defined





❖ **Quick mode:** Press button (1–3) for 2 seconds

❖ **High security mode:** Press button (1–3) for 2 seconds ➤ enter code.



Note: Must be installer-defined

Activating a Panic Alarm



Press  and  together for at least 2 seconds.




 
Press  and  together for 2 seconds





Press  and  together for 2 seconds.

Activating a Fire Alarm




 
Press  and  together for at least 2 seconds.




 
Press  +  together for 2 seconds

Activating an Auxiliary Emergency Alarm



Press  and  together for at least 2 seconds.



Press  +  together for 2 seconds

SMS Commands

NOTES: Command words are not case sensitive. A separator between command words may be used (or not). To receive an acknowledgement reply, add **RP** to the end of an SMS command.

Full Arm: code + A (Example: 1234A)

Get system status: code + ST

Home Arm: code + H

Bypass Zone: code + B + zone number

Group Arm: code + G + select group A–D

Un-bypass Zone: code + UB + zone number

Full Disarm: code + D

View last alarm : code + AL

Partition Full Arm: code + A + partition number

Change FM number: code + FMPHONE + FM serial number + NEW + new phone number

Partition Home Arm: code + H + partition number

Activate Output: code + UOON + UO number

Partition Disarm: code + D + partition number

Deactivate Output: code + UOOFF + UO number

Get SIM credit level: code + CR



LED Indicators – Elegant Keypad

| | | |
|---|--|--|
| <p> Power LED On: Power OK. Off: No power Rapid flash: System trouble. Slow flash: System is programming</p> | <p> Ready LED On: Ready to arm Off: Not ready to arm Slow flash: Ready to arm while entry/exit zone is open</p> | <p> Arm LED On: System in fully armed mode Off: System disarmed Rapid flash: Alarm Slow flash: System in Exit Delay</p> |
| <p> Partial Arm / Bypass LED On: System in partially-armed or zone-bypassed mode Off: No bypassed zones</p> | <p> Tamper LED On: Tamper alarm Off: No tamper alarm</p> | <p> Fire LED: On: Fire alarm Off: No fire alarm Flash: Fire circuit trouble</p> |

LED Indicators – 2-Way Remote Control

| Operation | Send command* | Receive Status |
|-------------|---------------|----------------|
| Full Arm | Green | Red |
| Partial Arm | Green | Orange |
| Disarm | Green | Green |
| Alarm | Green | Flashing LED |

* If the LED changes to orange, it indicates a low battery condition.

Defining User Codes – Elegant Keypad

- Grand master code (default = 1234) ,
- to scroll to **Codes/Tags** ➤ press twice.
- to scroll to the user (index number) for defining ➤ press twice.
- Enter (or re-enter) a 4–6 digit code, ; the system beeps and ACCEPTED displays

Registering to the RISCO Cloud

- After the RISCO Cloud has been enabled by your system installer, go to www.riscocloud.com
- Fill in your **first and last name**.
- Enter your **e-mail address** as the Login Name (required for 1st-time activation).
- Define **password** (minimum of 6 characters and at least one digit), and then confirm.
- Enter the **15 digits Panel ID** as it appears as printed on the postcard packaged with the main panel. You can also view it on the keypad (see the ProSYS Plus User Manual).
- Complete registration form, and then press **Register**.
- Open the e-mail received at the email account you had defined as the Login Name in step 3, and then click the link to activate your registration to the Cloud.

Logging in to the RISCO Cloud / Accessing the Web User Application

- Go to www.riscocloud.com
- Enter your **user name** and **password** (as defined during the registration process).
- Enter the **system PIN code** (user code).
- Click **Enter**.

iRISCO Smartphone App

Download the iRISCO Smartphone app from the Apple App store or the Android Play Store.

For additional information see the ProSYS Plus User Manual, available on our website:
www.riscogroup.com

© RISCO Group 2016. All rights reserved.