

ODH08E -16E v1.0

User & Installation Manual

IMPORTANT

This manual should be left with the panel after installation

SHENZHEN ORENA PHOTONIC TECHNOLOGY CO.,LTD

www.orena.com.cn

We reserve the right to the change product specifications without prior notice

Copyright © ***orena*** Products 2008

Introduction

The information provided in this manual covers the ODH08E~ODH04E-16E fire alarm control panel. The unit range is designed to meet the requirements of EN54 Parts 2 & 4.

This product should be installed, commissioned and maintained by suitably qualified service personnel with reference to IEE regulations and any statutory requirements.

General Description

The ODH08E-16E range of fire alarm control panels are microprocessor controlled and are available with either 8 or 16 sense zones (detector zones) dependent on the model. Both panels have 2 alarm zones (bell zones), zone disable facility, one man test, a class change input, non-latching facility, a permanent 28V fused supply, a 28V supply energized on fire, one set of volt free changeover contacts which operate on fault, and two sets of volt free changeover contacts which operate on fire. The unit is able to be connected with 16 fire alarm display panels at most.

Installation Procedure

Before proceeding with the installation, please read the section *Panel Operation*.

Installation of the panel should be carried out by qualified personnel.

Using the metal box as a template, mark the position of the fixing holes on the wall. Drill and plug the wall, then screw the panel to the wall. Ensure the panel is free from knockout discs, swarf and other debris.

Do not remove any end of line resistors from the panel until after the following test is performed.

With all end of line resistors fitted inside the panel, connect the panel mains supply to an exclusive 240V AC fused supply. Switch the mains supply on.

The internal buzzer will sound. Connect two sealed lead acid batteries to the panel - they should be connected in series providing a 24V DC supply.

With both the mains and battery supplies connected, the panel should be silent and in its normal operating mode (power lamp on, alarms & buzzer silent). **If a fault is indicated, refer to the fault finding section before proceeding to find the solutions.** Disconnect the batteries and switch off the mains supply. Remove the 5k1 end of line resistor from sense zone 1. Terminate sense zone 1 circuit wiring in the panel observing correct polarity and fit the 5k1 end of line resistor at the very end of the circuit. Check that all the detectors and call points are correctly wired. With sense zone 1 connected and all other end of line resistors fitted inside the panel, connect the mains and battery supplies.

If the panel indicates a fault, refer to the fault finding section before proceeding. Do not megger cables connected to either the panel or any field devices. If no faults are indicated then power down the panel and follow the same procedure with the additional sense zones and then the alarm zones. Adding the zones one at a time makes fault finding and commissioning much simpler. Make sure that no bare wires come into contact with the panel circuit boards during installation.

Detector Head Removal

The ODH08E-16E range supports head removal. The basic principle of head removal is to ensure that all call points will function even if a detector head has been removed. Head removal requires either zener clamp bases or schottky diode bases with the appropriate end of line device to be fitted. When a detector head is removed, the panel will show a fault, but the sense zone circuit will remain intact.

Panel Operation***Enabling the front panel buttons.***

To enable the front panel buttons, the key switch in the top left of the panel must be turned to the 'On' position.

Performing a lamp test.

If the panel is in its normal condition, pressing the Reset button will cause the panel to perform a lamp test.

Resetting the panel after a fire is detected.

To reset the panel after a fire event, press the Silence button followed by the Reset button.

Resetting the panel.

If any of the panel functions have been activated, pressing the Reset Button will return the panel to its normal condition.

Silencing/resounding the alarms.

If a fire is detected, the panel will automatically activate the alarm circuits. To silence the alarms, press the Silence button once. To resound the alarms, press the Silence button again.

Silencing the internal buzzer.

If a fault is detected by the panel, the internal buzzer will sound. To silence the buzzer press the Silence button.

Using the one man test function.

To enter test mode, press the Test button. The test LED will be lit and zone 1 fault LED will be flashing. To place zone 1 into test mode, press the Silence button. Press the Test button again and now zone 2 fault LED will be flashing with zone 1 fault LED on steady if it is in test mode. To select further zones, press the Test button to cycle through the zones and use the Silence button to toggle the status of the selected zone. Placing too many zones into test mode at the same time may leave the building with inadequate protection.

When a zone in test mode detects a fire event, the alarms will ring for a few seconds before resetting. If the panel is left in test mode and no events occur for approximately 10 minutes, the panel will automatically exit test mode and resume normal operation.

If a fire is detected on a zone not in test, then the panel will enter the fire condition and exit test mode.

To exit test mode and return the panel to normal operation, press the Reset button.

Using the disable function.

The panel allows the user to selectively disable the sense zones and the alarm zones. The selection process is very similar to that used in the test function. To enter disable mode, press the Disable button. The disable LED will be lit and zone 1 disable LED will be flashing. Pressing the Silence button will toggle the statuses of the selected zone and pressing the Disable button will cycle through the available zones.

Once the required zones have been selected, press the Reset button. If any zones were disabled, the disable LED and the relevant zone disable LED(s) will remain lit. All incoming signals from disabled sense zones will be ignored. **If the alarm zones are disabled, then the alarms will not be activated even if the panel detects a fire event on an active sense zone.**

Selecting a zone as non-latching.

In some situations, such as interlinking fire alarm panels, it is necessary to set a sense zone as non-latching. When a fire event is detected on a non-latching zone, the panel will go into fire as usual but will automatically reset as soon as the device signaling fire is reset.

To enter the non-latching selection mode, press and hold down the Test button. While still holding the Test button, momentarily press the CPU RESET button inside the panel, followed by the WATCHDOG RESET button. Keep the Test button held down until the disable and general fault LEDs light, then release the Test button. Zone 1 fault and disable LEDs will be flashing. Pressing the Silence button will toggle the status of the selected zone and pressing the Test button will cycle through the available zones. After the relevant zones have been selected, press the Reset button.

Fault Finding

Front panel buttons not working.

To activate the front panel buttons, turn the keyswitch in the top left of the panel to the ON position.

Power LED blinks intermittently

This is perfectly normal and indicates that the processor is running an internal memory check.

Fault LED and sense zone fault LED flashing, buzzer sounding.

Faults monitored are:

- i Open circuit on the sense zone
- wiring. i Short circuit on the sense
- zone wiring. i Detector head removal.

Check all detectors and call points on the sense zone indicated. Check wiring is as in example diagrams and ensure the end of line monitor is a 5k1 resistor or an active end of line device.

Fault LED and alarm zone fault LED flashing, buzzer sounding.

Faults monitored are:

Open circuit on the alarm zone wiring.

Short circuit on the alarm zone wiring.

Blown alarm fuse(s)-Note that drawing excessive current from the 28V

Aux supply will blow the fuse in Alarm Zone 2.

Check alarm zone wiring is as in example diagrams and ensure that the 5K1 end of line resistor is fitted. Check alarm zone fuses and fuse clips.

Fault LED flashing and PSU fault LED on, buzzer sounding.

Faults monitored are:

Battery supply not present.

Batteries damaged or not fully charged.

Blown battery fuse.

Mains supply not present.

Blown mains fuse.

Check relevant fuses and fuse clips. Ensure batteries are connected correctly and battery leads are secure.

Fault LED flashing and 28V fault LED on, buzzer sounding.

The panel has detected a problem with the permanent 28V supply. Check the PERM 28V FUSE and fuse clips.

Fault LED flashing and earth fault LED on, buzzer sounding.

The panel has detected an earth fault. The only earth connection to the panel terminals should be to the mains input terminal block. Check that no other earth connections are present.

Fault LED and CPU fault LED lit.

Processor fault detected. If no other problems are found then reset the processor. Inside the panel are two push buttons marked CPU RESET and WATCHDOG RESET. Press CPU RESET followed by WATCHDOG RESET.

Panel does not indicate fire when a call point or detector is tested.

Either a faulty call point / detector or wiring not as shown in diagrams. Check the firing resistance of the device is 510 ± 60 ohms at the negative side and ensure that the correct end of line device is fitted.

Head removal not working.

Check compatible base is being used and is wired correctly. Either a zener clamp base with a 5k1 end of line resistor, or a schottky diode base with an active end of line device must be used.

Fuse ratings.

Mains fuse (F201).....2A A/S

Alarm fuses (F2 ~ F4).....300mA

A/S Battery release fuse (F203).....5A A/S

Battery recharge fuse (F202).....2A A/S

Permanent 28V fuse (F1).....1.5A A/S

Other faults.

For any other faults, perform a CPU reset. Inside the panel are two push buttons marked CPU RESET and WATCHDOG RESET. Press CPU RESET followed by WATCHDOG RESET. This will restart the processor, but all configuration information (disable, non-latching) will have to be re-entered.

Fault Output

The fault output, marked FAULT on the PCB, is a set of volt free changeover contacts. When the panel is in fault, common (C) is shorted to normally open (NO). In normal operation with no faults, common (C) is shorted to normally closed (NC).

Panel Specifications	ZONE 08	ZONE 16
Mains Voltage (V AC)	110~220	110~220
System Voltage (V DC)	28.	28
Quiescent Current, Unsilenced Fault (mA)	≤ 150	≤ 220
Minimum Battery Size 2 × 12V Required (Ah)	4	7
Detector Voltage (V DC)	28	28
Maximum Number of Detectors per Zone	30	30
Firing Impedance (Ohms)	1100	1100
Sense Zone End of Line (Ohms)	5.1K	5.1K
Alarm Voltage (V DC)	28.	28
Number of Alarm Zones 2	2	2
Maximum Alarm Current per Zone (mA)	300	300
Alarm Zone End of Line (Ohms)	5.1K	5.1K
Max. Auxiliary Supply Current in Fire (mA)	300	300
Panel Weight [Excluding Batteries] (kg)	3	3
Panel Dimensions (mm)	330 x 265 x 88.25	330 x 265 x 88.25

Fire Alarm Display Panel and other load

ODH04E-16E Load and capacity of Fire alarm display panel	
Number of fire display panel (Max Supply Current: 1.3A)	Number of Bell JL (18 mA) Number of Sound alarm SG (120 mA)
1pc	(0~1pc JL)or (0~1 pc SG)
2 pcs	(0~2 pcs JL)or (0~2 pcs SG)
3 pcs	(0~3 pcs JL)or (0~3 pcs SG)
4 pcs	(0~4 pcs JL)or (0~4 pcs SG)
5 pcs	(0~5 pcs JL)or (0~5 pcs SG)
6 pcs	(0~6 pcs JL)or (0~6 pcs SG)
7 pcs	(0~7 pcs JL)or (0~5 pcs SG)
8 pcs	(0~8 pcs JL)or (0~4 pcs SG)
9 pcs	(0~9 pcs JL)or (0~4 pcs SG)
10 pcs	(0~8 pcs JL)or (0~3 pcs SG)
11 pcs	(0~8 pcs JL)or (0~3 pcs SG)
12 pcs	(0~7 pcs JL)or (0~2 pcs SG)
13 pcs	(0~7 pcs JL)or (0~2 pcs SG)
14 pcs	(0~6 pcs JL)or (0~1 pc SG)
15 pcs	(0~5 pcs JL)or (0~1 pc SG)
16 pcs	(0~4 pcs JL)

Or according to the actual requirements, you may calculate the numbers of bells and sounders as the conditions below:

The Max. alarm current is 98mA when one fire alarm display is connected with one bell;

The Max. alarm current is 200mA when one fire alarm display is connected with one sounder;


The Max. alarm current per fire alarm display panel is 80mA;

The Max. current the fire alarm control panel may supply power to fire alarm display panel is 1.3A.


Sense Zone Wiring Diagram

Find the detector bases you will be using and check to see which end of line device is required- either a 5.1K resistor or an active end of line unit.

Sense zone with a 5.1 K end of line resistor

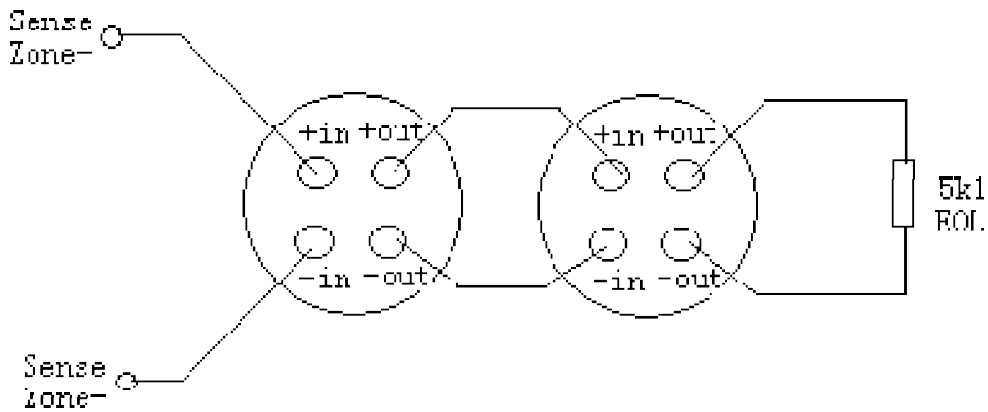


Sense zone with an active end of line.

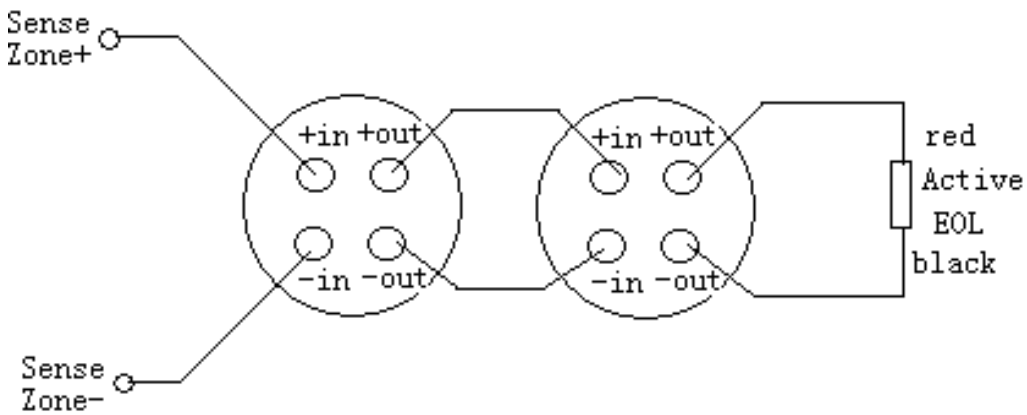

The panel is supplied with 5.1K end of line resistors as standard. Active end of line units are available separately.


Alarm Zone Wiring Diagram

The alarm zones are wired as in the diagram below. A 5.1K end of line resistor must be fitted at the end of the circuit. Motorised fire bells may be used, but solenoid bells MUST NOT be connected to the panel.

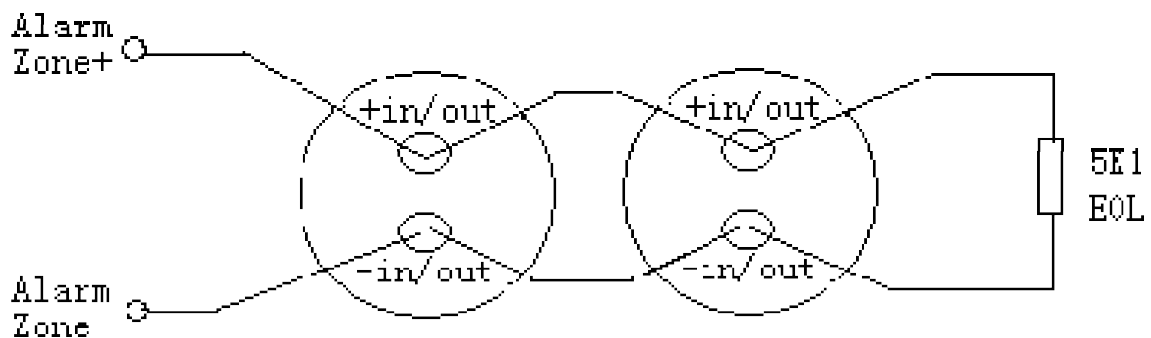

The colour bars on a 5K1 resistor are green, brown, red and gold.

Attaching a relay to an alarm zone.

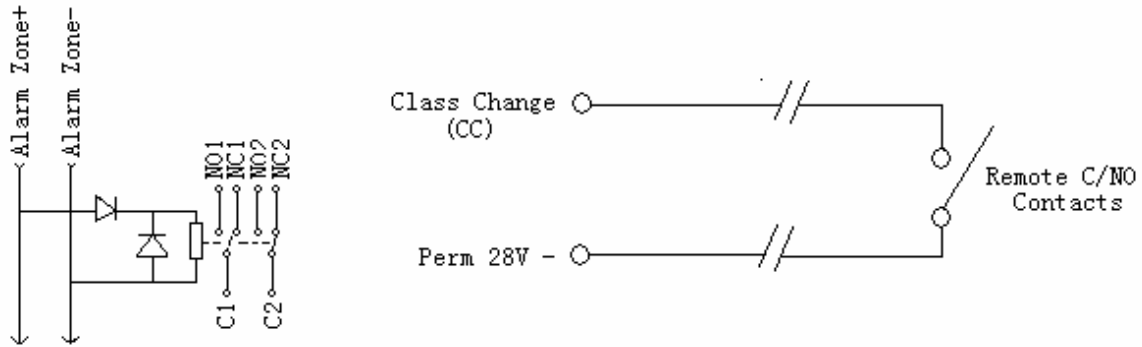

A relay may be connected anywhere on the alarm zone wiring provided that two diodes (1N4001 or equivalent) are fitted as shown in the diagram. The end of line resistor is not shown, but must be connected at the end of the alarm zone wiring. The relay must have a 24V DC coil.

Alternatively, a relay can be connected to the Aux 28V terminals, however a diode must still be connected across the coil.


Additional Wiring Information

Ringling the alarms remotely.

The class change (CC) facility allows a remote source to sound the alarms. When the CC terminal is connected to the Perm 28V “—” terminal, the alarms will sound.


Signalling fire to another panel.

By connecting two panels as shown below, when panel B closes its auxiliary contacts, panel A will go into fire. If the zone on panel A is set to non-latching, it will automatically reset when panel B opens its auxiliary contacts. If both panels need to signal fire to each other, simply duplicate the circuit substituting panel A for panel B and vice versa.

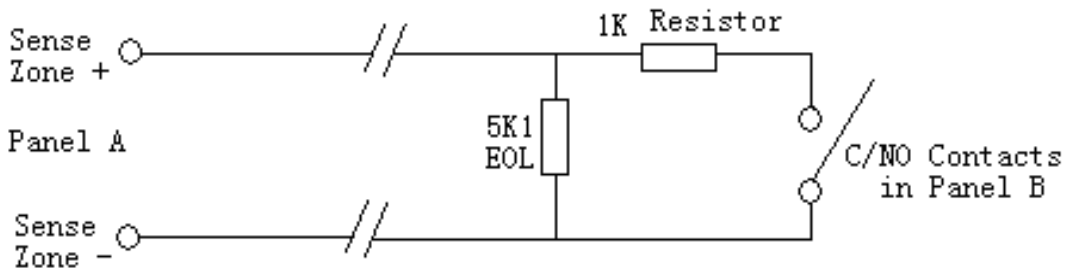

Connecting magnetic door holders.

Low voltage magnetic door holders can be switched using a set of auxiliary contacts in the panel. When the panel goes into fire, power to the door holders is removed allowing the doors to close. Care must be taken to ensure that the auxiliary contacts rating of 24V/ 1A is not exceeded. Mains voltages MUST NOT be switched directly from the auxiliary contacts - instead, fit a heavy duty relay operated from the auxiliary contacts.

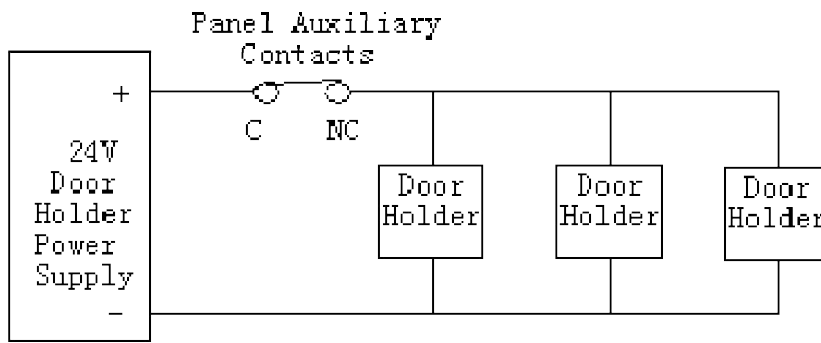

ODH08E-16E System Log

All events should be properly recorded in this log book. An event should include fire alarms (whether real or false), faults, tests, temporary disconnections and the dates of installing or servicing engineering visits with a brief note of work carried out and outstanding.

Name and address
of installation
.....
.....
.....

Person responsible	Date
for log book	Date.....
.....	Date.....
.....	Date.....

System installed by

and is maintained under contract by

Tel.

Notes:

Date	Time	Zone	Event	Action Required	Date Completed	Initials

SHENZHEN ORENA PHOTONIC TECHNOLOGY CO., LTD
ADD: Orena Bldg, Zhong'an Industrial Park, 691# Longjing Rd, Nanshan Dist, Shenzhen, China
TEL: (86)755 2678 7499 26786455*2719
FAX: (86)755 2678 7499
ZIP: 518055
HTTP: www.orena.com.cn
E-mail: oem@orena.com.cn